

Centro 1

Assembly Instructions




Centro  Now with
T-Loc Connections

1




Place base plates on the floor, position lower posts centrally over male fitting of base plate (A), and rotate until assembly drops into position, continue rotating clockwise through 90° to secure (B).

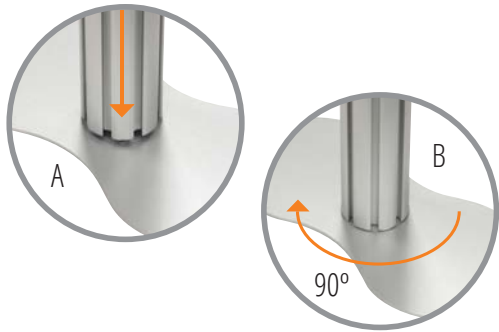


2

Affix upper posts to lower posts by positioning female end centrally over male fitting (C), and rotate until assembly drops into position, continue rotating clockwise through 90° to secure (D).

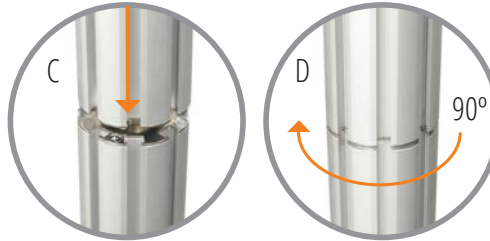

3

Assemble 750mm horizontal profiles by slotting and twisting together to join. Carefully rest ends of first horizontal assembly on base plates between posts.

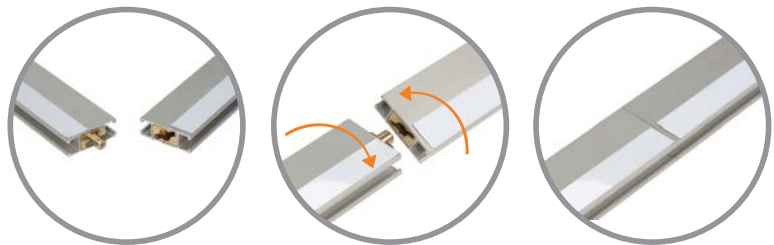


4



Slot clamps of assembled profile into post channels and close T-Loc lever to secure.

5

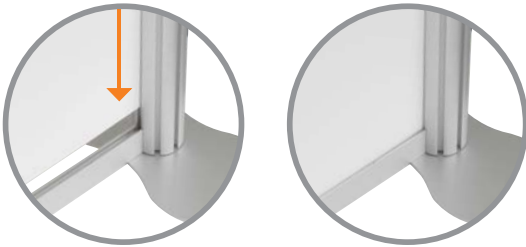

Arc and slot rigid panel into innermost channels of posts, and lower into channel of horizontal profile assembly.

6



Slot second horizontal assembly onto top of rigid panel and into channels of posts. Close remaining T-Loc levers to complete assembly of the display.



