

# Centro Display Pod

Assembly Instructions



Now with  
Centro T-Loc Connections

1




Place base plates on the floor, position posts (with single bracket) centrally over male fitting of base plate (A), and rotate until assembly drops into position, continue rotating clockwise through 90° to secure (B).




A

B

90°

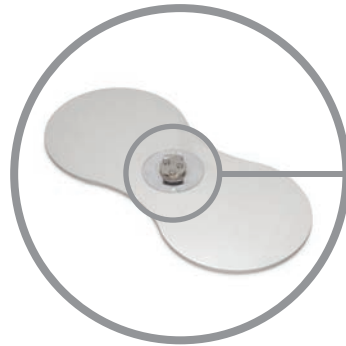

2

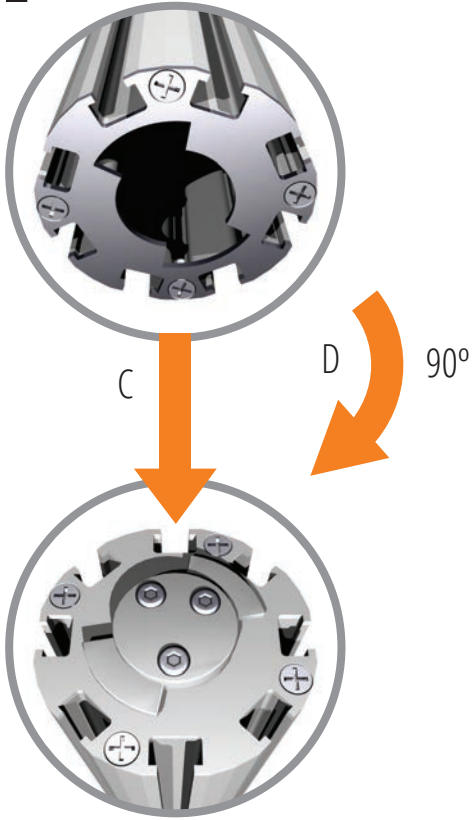

Affix posts (with two brackets) to lower posts by positioning female end centrally over male fitting (C), and rotate until assembly drops into position, continue rotating clockwise through 90° to secure (D). Ensure that all shelf brackets are aligned on one side of the posts (as shown right).



3



Position post assemblies facing one another with aligned shelf brackets inwards. Connect post assemblies by attaching one of the straight 616mm profiles to the bottom, parallel to the shelf brackets. Slot clamps of profile into post channels and close T-Loc lever to secure.

4



Pre-assemble the two black acrylic shelves to 616mm profiles by aligning the predrilled holes, inserting 4 off countersunk self-tapping screws, and tightening with cross-head screwdriver supplied to secure.

5



With the black acrylic uppermost, slide first assembly into the same post channels as the bottom profile, until the T-Loc clamps rest on the pre-installed locator bars of the bottom posts. Close T-Loc levers in ends of profile to secure in position.

6



Ensuring the black acrylic is lowermost, slide and raise second assembly into the same post channels as the previous enclosure until the T-Loc clamps come into contact with the bottom of the pre-installed locator bars of the upper posts. Close T-Loc levers to secure in position.

7



Position top cover onto Centro posts, align countersunk holes with threads within post extrusion, insert 4 off countersunk machine screws and tighten to secure.

8



Ensure shelf brackets are in their open position by loosening screw in underside. Slide shelf between jaws of bracket and using scribed lines, ensure shelf is positioned centrally. Tighten screws in brackets to securely clamp shelf. Repeat for remaining two shelves.

9



Insert one end of the foamex base panel into angled channel of post, arc panel so opposite end is inserted into corresponding post channel. Graphic should follow similar curvature to black acrylic shelf. Repeat process for remaining base and foamex header graphic panels on the front and back of the Display Pod.

10



Black plastic plate on shelf bracket is loose fitting prior to assembly.



Repeat stage 9 for transparent infill panels to be inserted between each shelf on the front and back of the DisplayPod to complete assembly.